PROFESSIONAL COOKER WITH ELECTRIC OVEN

Installation and operating instructions

Model

CF4-68GEM CF6-610GEM CFM4-66GEM
CFM4-68GEM CFM6-610GEM

Code 5630129A0

WARNING!
Please read the instruction manual carefully

Manufacturer	**LOTUS S.p.A.**
Address	**Via Calmaor, 46** **31020 San Vendemiano (TV)** **Tel.: +39 0438 778020** **Fax.: +39 0438 778277**
PRODOTTO	
REV	**0**
Edition date	**14/06/2019**
Language	**ENGLISH**
Code	**5630129A0**

Contents

1 INTRODUCTION 4
1.1 Installation drawing 4
1.2 Components 5
2 GENERAL INFORMATION 11
2.1 Declaration of compliance 11
2.2 User information, RAEE Directive on waste electrical and electronic equipment 12
2.3 Technical data table 12
3 INSTALLATION 13
3.1 Delivery checks 13
3.2 Removing the packaging 13
3.3 Mechanical installation 13
3.4 Electrical/gas connections 13
4 BURNERS TECHNICAL DATA TABLE (ITGB) 18
4.1 Burners technical data table 18
5 INSTRUCTIONS FOR USE 19
5.1 General information 19
5.2 Lighting and adjusting the open rings 19
5.3 Starting the main burner and adjusting the temperature 19
5.4 Turning the appliance off 19
5.5 Igniting and adjusting the static oven 19
5.6 Switching the grille on 20
5.7 Igniting and adjusting the multi-function electric oven 20
5.8 Oven lighting 21
6 MAINTENANCE 22
6.1 Routine 22
6.2 Changing the open ring nozzles (fig. C) 22
6.3 Replacing the oven lamp 22
6.4 Minimum setting 22
6.5 Spare parts 23
7 CLEANING 24
7.1 Routine cleaning 24

1 INTRODUCTION

1.1 Installation drawing

FIG. 1 CF..-6GE

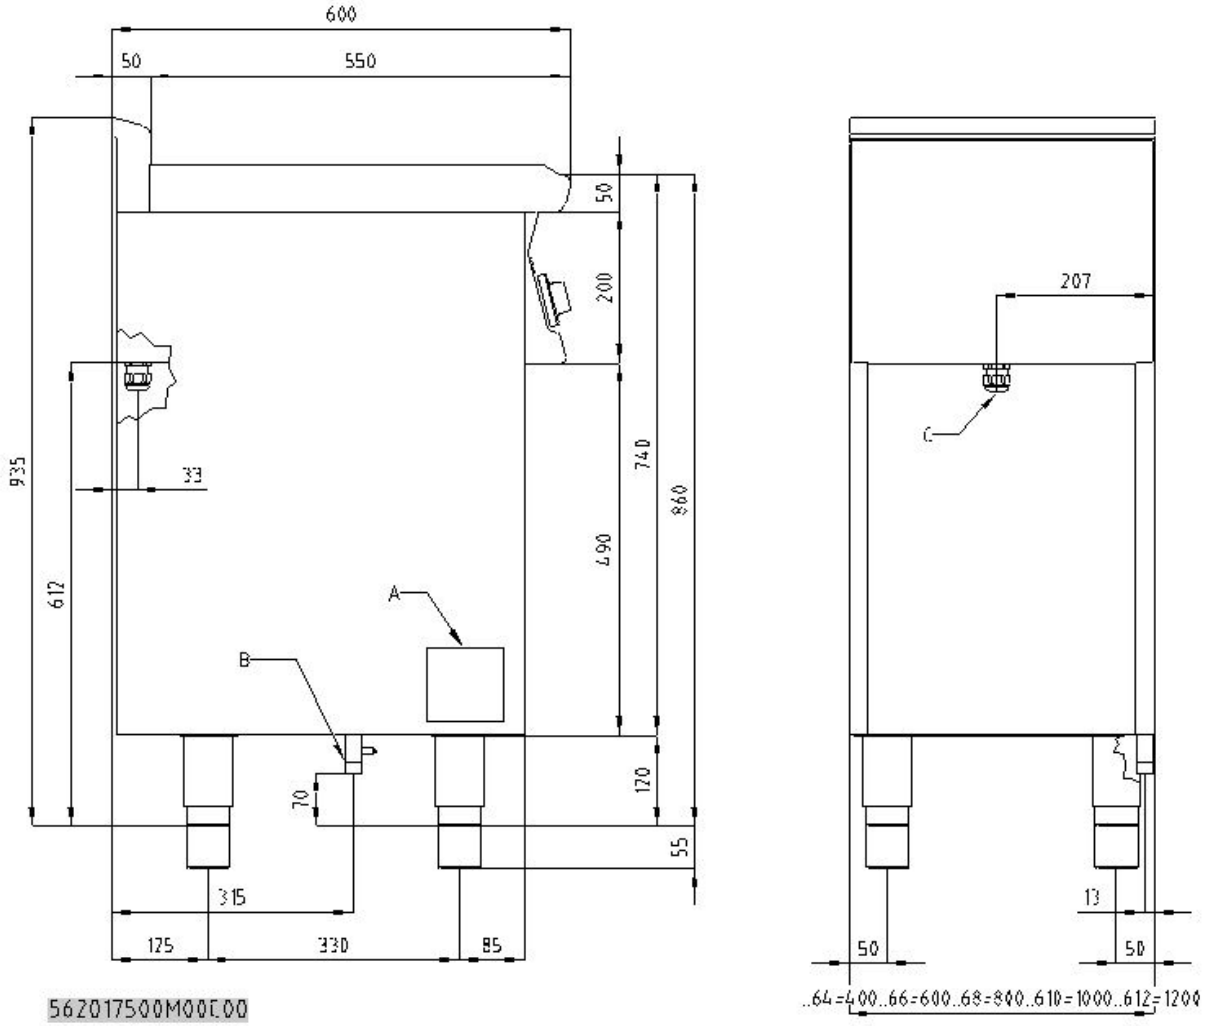

A Data Plate
B Gas connection
C Electrical connection

1.2 Components

FIG. B

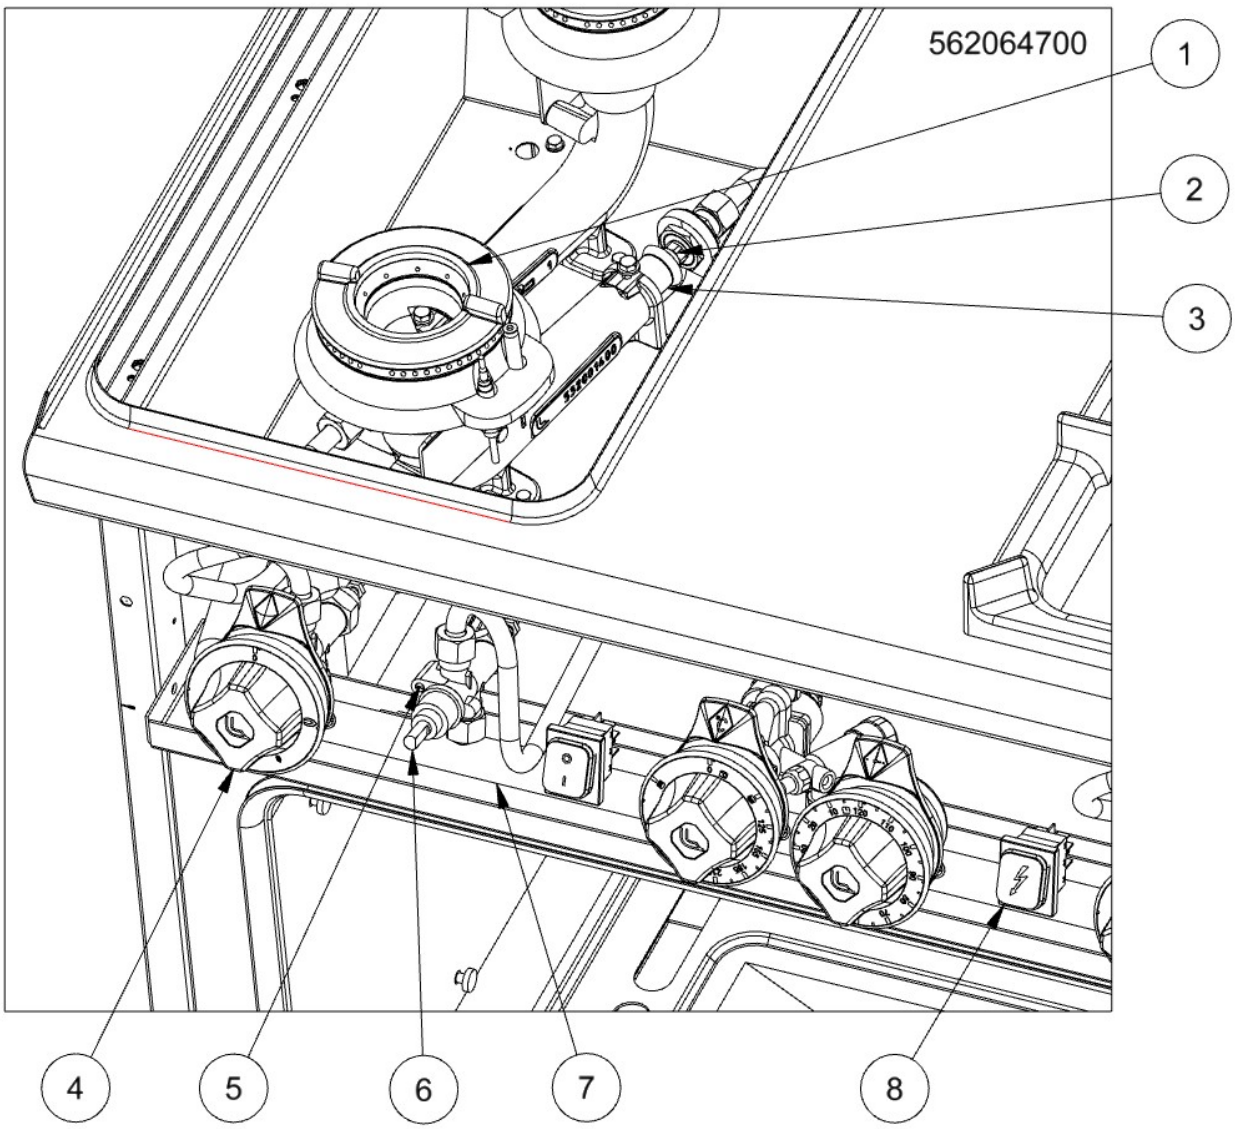

1 Gas ring cover
2 Injector
3 Air adjustment
4 Knob
5 By-pass
6 Gas tap
7 Ramp
8 Ignition button

FIG. C

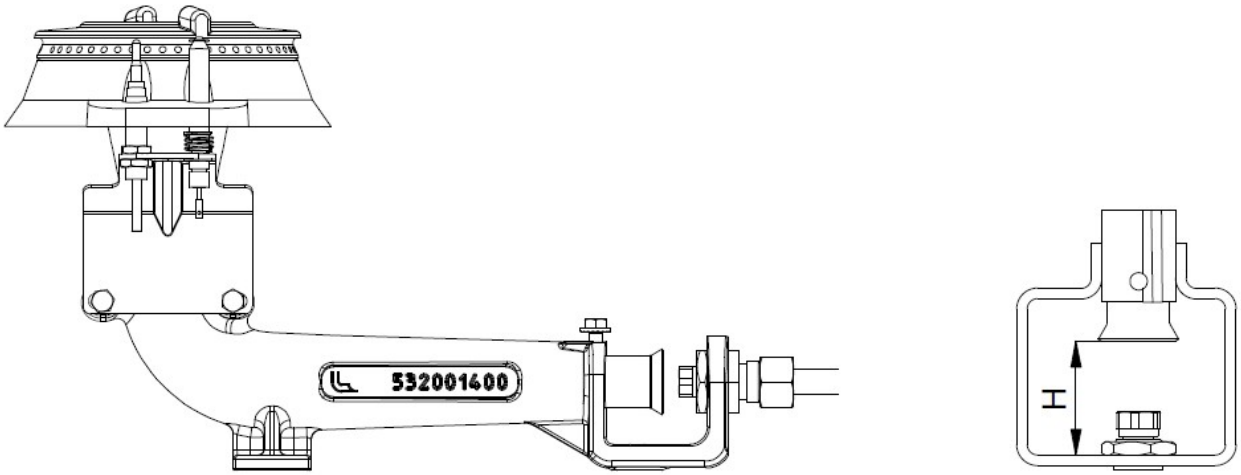

562065900M00_00

Air adjustment

FIG. E

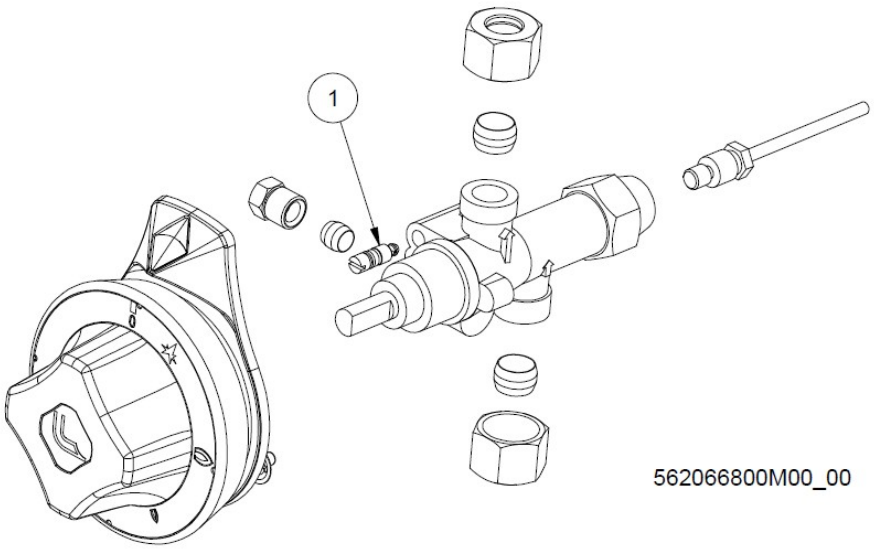

562066800M00_00

1 By-pass

FIG. D

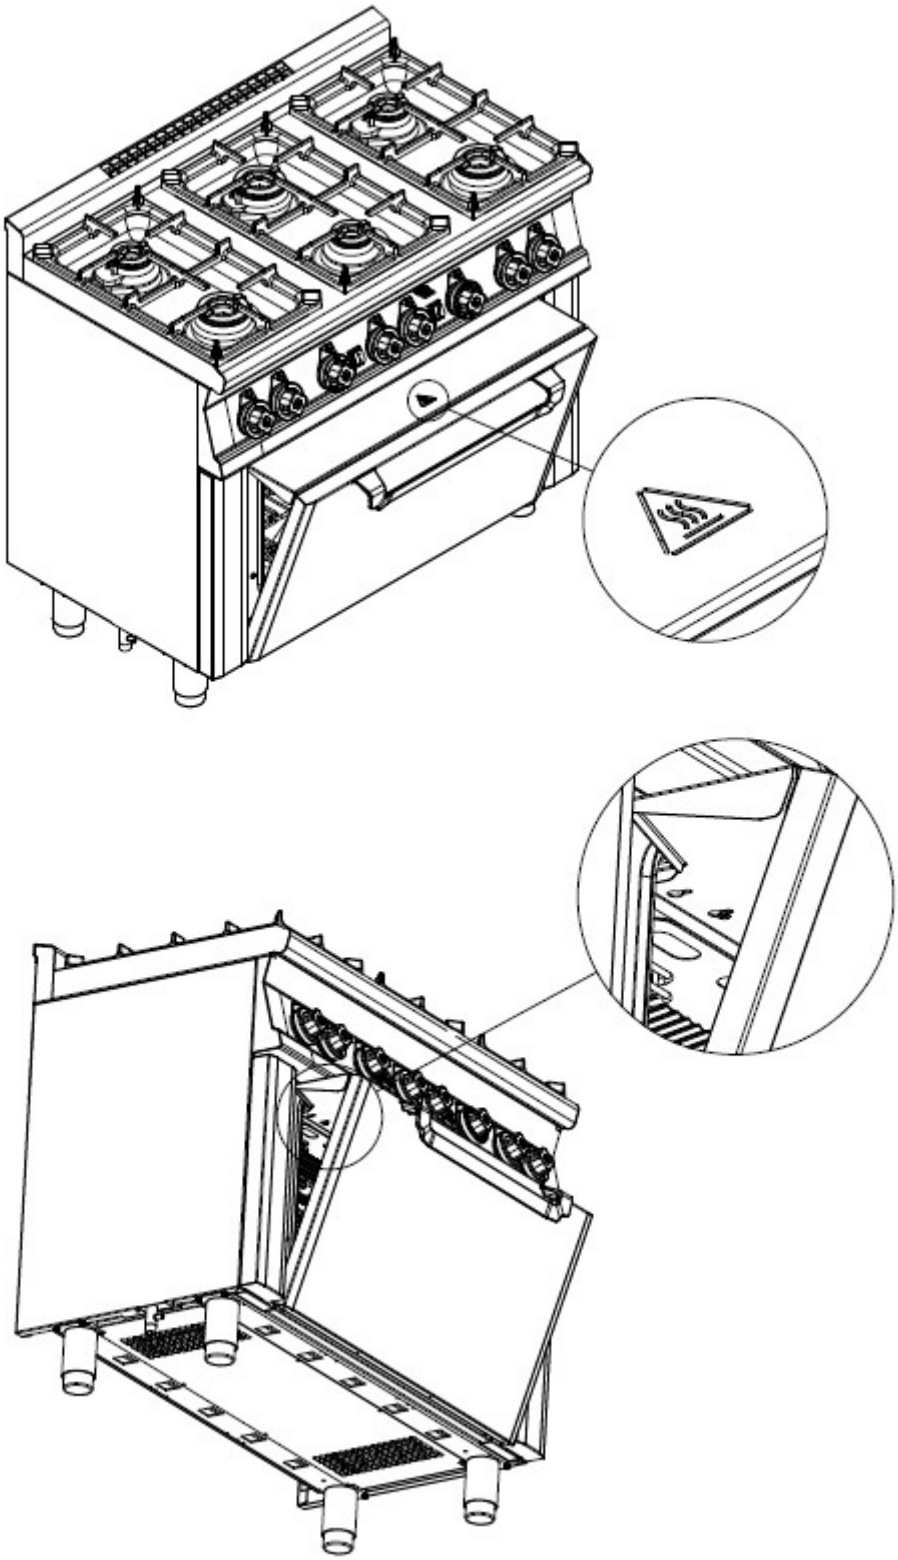

Knob protection for operation with GRILL

STATIC ELECTRIC OVEN WIRING DIAGRAM (D)

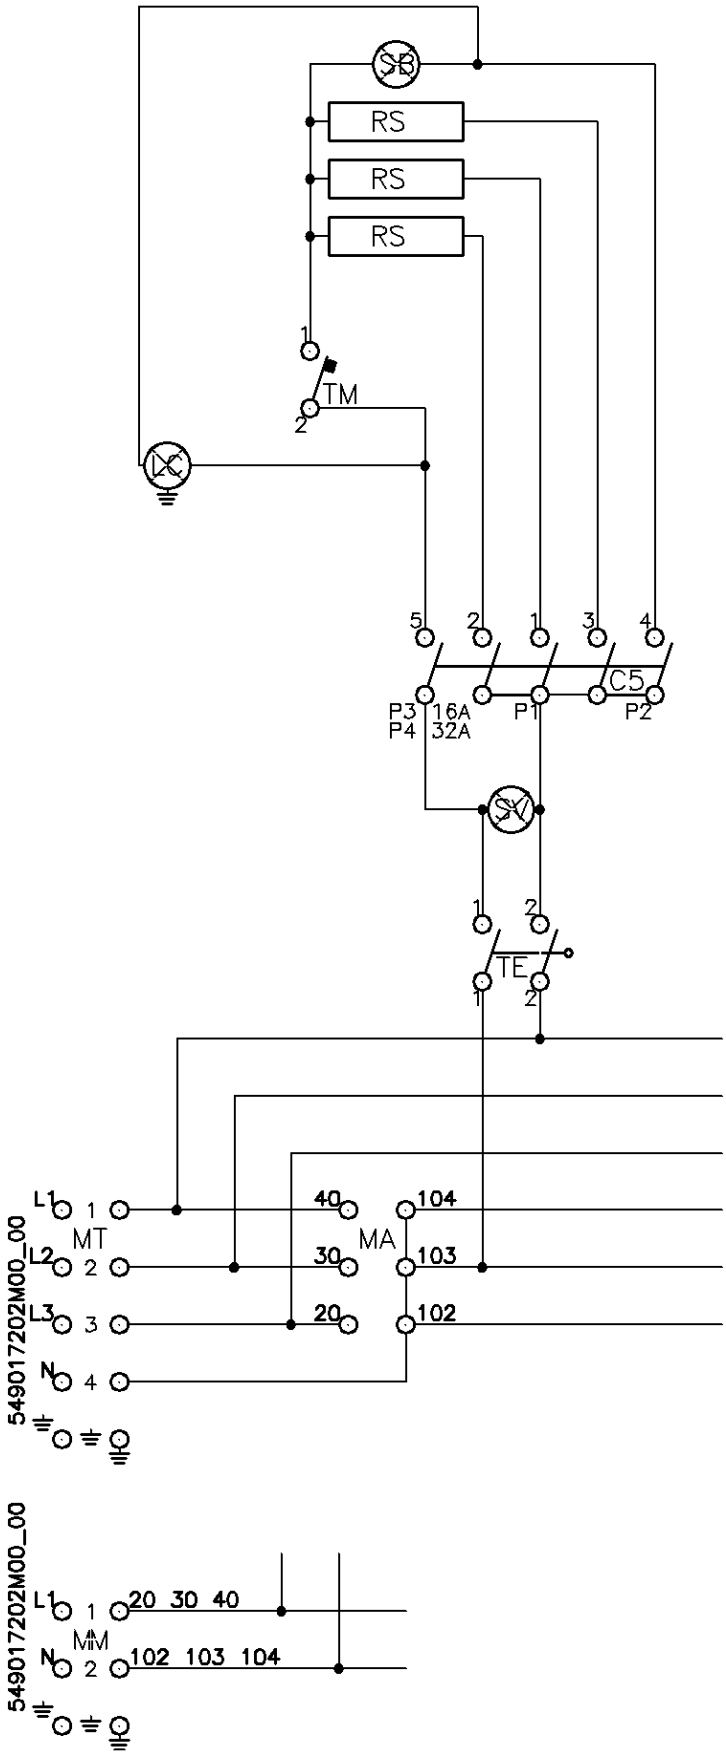

WIRING DIAGRAM MULTIFUNCTION ELECTRIC OVEN (E)

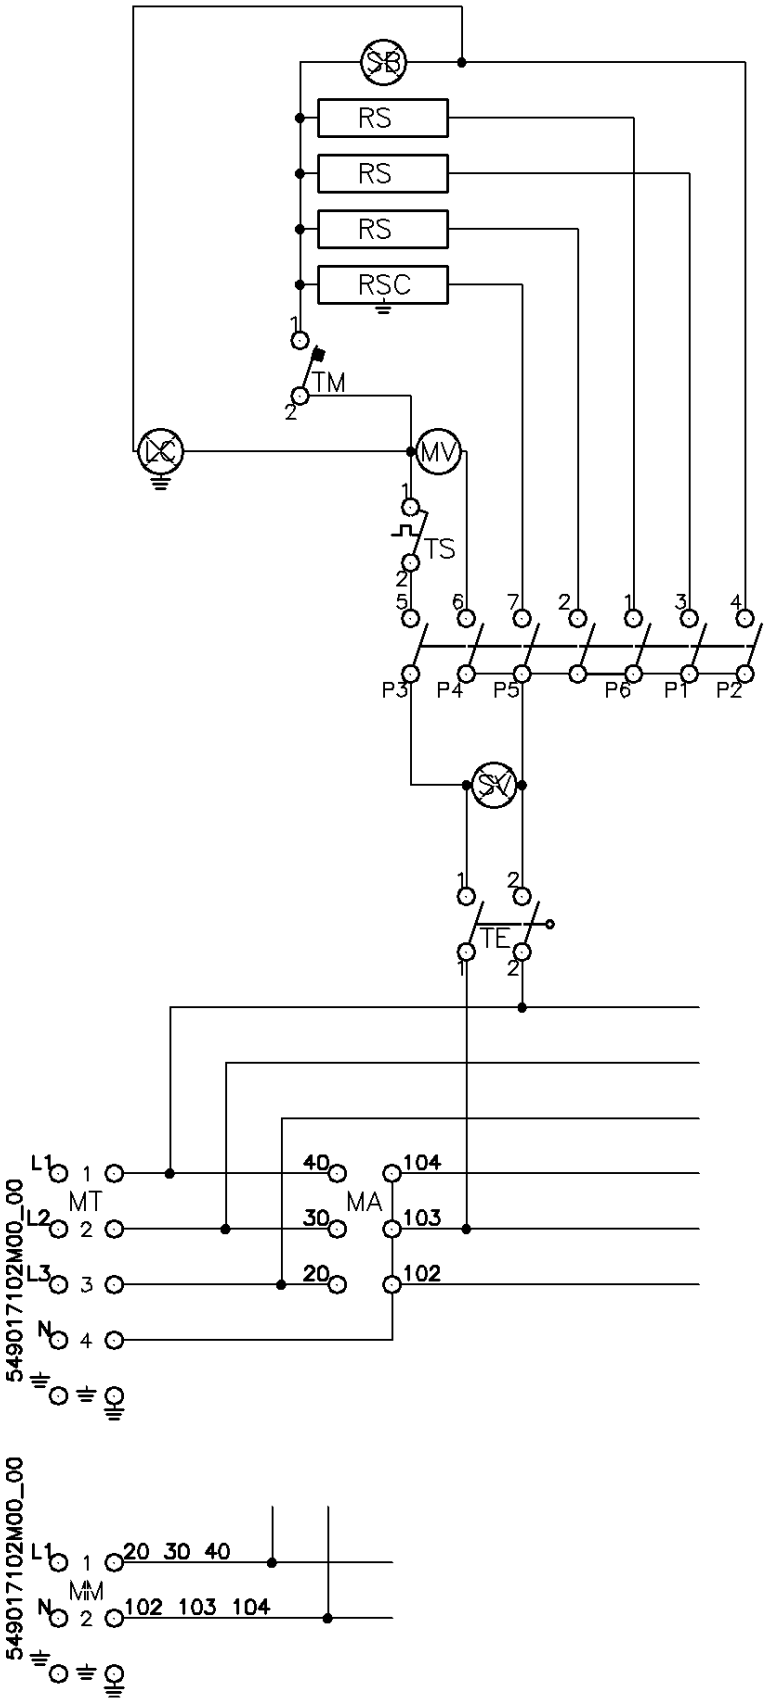

TOP WIRING DIAGRAM

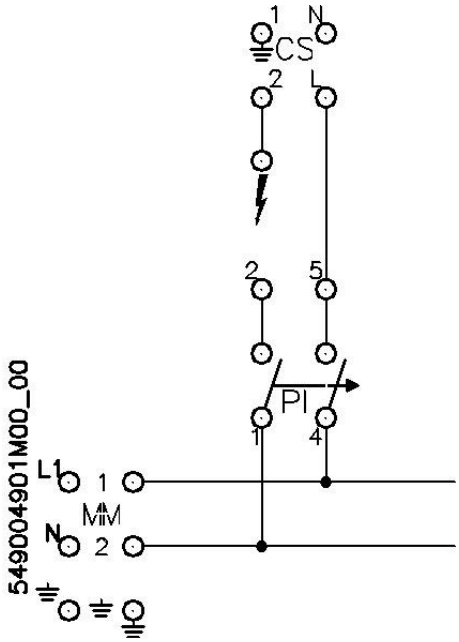

LIST OF REFERENCES ELECTRICAL DIAGRAMS

MT Three-phase power supply terminal block
MA Power switching terminal block
MM Single-phase power supply terminal block
SV Green indicator light
SB White indicator light
TE Timer
TM Thermostat
RS Heating element
RSC Circular resistance
LC Light
TS Safety thermostat
MV Fan motor
C5 5-pole switch
PI Instant button
CS Spark control unit

2 GENERAL INFORMATION

2.1 Declaration of compliance

The manufacturer declares that the appliances comply with the requirements of the regulation **GAR 2016/426** for the gas part and directive **2014/30/EU,2014/35/EU** for the electrical part. Installation must be performed in compliance with current regulations, especially with regard to ventilation of the premises and the exhaust gas evacuation system.

- Read the warnings in this manual carefully. They provide important information about safe installation, use and maintenance.
- The instruction manual must be kept for the entire duration of the equipment and made available to users for every possible consultation. The manual should be consulted for any information concerning installation, use and maintenance of the appliance.
- After removing the packaging, check the integrity of the equipment.
- All packaging materials (plastic bags, polystyrene, staples, etc.) must be disposed of in compliance with current regulations.
- Before connecting the appliance, make sure that the information on the data plate matches the electricity and gas mains where the appliance is installed. **The manufacturer accepts no liability if the equipment is not connected in accordance with current regulations.**
- Always keep all parts of the equipment clean to avoid the risk of oxidation/rust and/or aggression by chemical agents.
- The equipment must only be used by personnel trained for the purpose.
- **The installation must be implemented by professionally qualified personnel in accordance with the manufacturer's instructions and current reference standards.**
- The electrical safety of this equipment is only ensured when it is correctly connected to an effective ground/earth system as required by current electrical safety standards. The manufacturer cannot be held liable for any damage caused if the system is not connected to ground/earth.
- Before carrying out any cleaning or maintenance tasks on the equipment, unplug it from the electricity mains. In the event of faults or malfunctions, always deactivate the appliance.
- **Repair work of any kind must only be performed by qualified personnel.**
- This appliance must only be used for its expressly intended purpose for cooking or heating food. Any other use is considered improper.
- The appliance is intended for professional use and must be used by trained personnel.
- The installation and possible transformation to another power supply voltage (if envisaged), or transformation for operation with another type of gas, must be implemented exclusively by qualified and authorised professional personnel.
- Before using the appliance, carefully clean all surfaces intended to come into contact with food.
- The manufacturer declines any and all liability for any direct or indirect damage resulting from improper use of the equipment. The manufacturer declines any and all liability for damage caused by incorrect installation, tampering, poor maintenance and unskilled use. Moreover, the manufacturer declines any liability for possible inaccuracies that may be contained in this booklet attributable to errors in transcription or printing and equally reserves the right to make any changes to the product it deems useful and/or necessary without compromising its essential characteristics.
- **The manufacturer cannot be held liable for any damage caused by failure to comply with these basic standards and all other use and maintenance standards contained in this booklet.**

2.2 User information, RAEE Directive on waste electrical and electronic equipment

With regard to the regulatory framework of reference of the European Community, we remind the user of the following:

- Used AAE (Electrical and Electronic Equipment) products must be collected separately
- The user can carry out this collection in the RAEE collection systems and return the equipment to the distributor when purchasing a new one
- Plus being RoHS compatible, (in accordance with Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment) the potential effects on the environment and human health may be due to the misuse of the same equipment or parts of it
- The symbol next to the rating plate indicates the obligation of separate collection
- The penalties provided for in the event of improper disposal of RAEE (Waste Electrical and Electronic Equipment) are those provided for by the national transpositions of European Directives 2012/19/EU

2.3 Technical data table

Electrical technical data table CF S60GE

MODEL	DIMENSIONS	POWER SUPPLY	MAXIMUM ABSORPTION (A)	TOTAL POWER (kW)	OVEN LIGHT (kW)	POWER SUPPLY CABLE silicon type
CF4-68GEM	80x60x90h	230V~ 50/60 Hz	11,4	2,62	0,015	3 x 1,5 mm²
CF6-610GEM	100x60x90h	230V~ 50/60 Hz	11,4	2,62	0,015	3 x 1,5 mm²
CFM4-66GEM	60x60x90h	230V~ 50/60 Hz	13,3	3,05	0,015	3 x 1,5 mm²
CFM4-68GEM	80x60x90h	230V~ 50/60 Hz	13,3	3,05	0,015	3 x 1,5 mm²
CFM6-610GEM	100x60x90h	230V~ 50/60 Hz	13,3	3,05	0,015	3 x 1,5 mm²

Technical data table - Gas CF S60GE

MODEL	DIMENSIONS	RATED BURNER CAPACITY (kW)		RATED TOTAL GAS FLOW (kW)	GAS FITTING UNI EN 10226-1
		3.5 kW	5.5 kW		
CF4-68GEM	80x60x90h	2	2	18	R 1/2GM
CF6-610GEM	100x60x90h	3	3	27	R 1/2GM
CFM4-66GEM	60x60x90h	2	2	18	R 1/2GM
CFM4-68GEM	80x60x90h	2	2	18	R 1/2GM
CFM6-610GEM	100x60x90h	3	3	27	R 1/2GM

3 INSTALLATION

3.1 Delivery checks

On delivery, it is important to check the following:

- External conditions of the packaging
- The general status of the equipment
- The conformity of the model with the information in the technical data plate and the instruction manual
- The conformity of the equipment and components to the order form

3.2 Removing the packaging

While removing the packaging, take care not to damage the appliance. Remove the protective film from the stainless steel and eliminate any traces of glue. Do not smoke. Perform this operation away from sources of heat and wear protective gloves. Do not disperse packaging material in the environment, keep it out of the reach of children and dispose in compliance with current legislation.

3.3 Mechanical installation

Place the appliance on a flat base. Adjust and stabilise the appliance by acting on the support feet. Make sure that the surrounding walls and/or equipment are capable of withstanding the heat emitted by this appliance. Connect the water supply (if necessary).

Caution

Do not install the appliance near equipment/machines used in cold processes. If the appliance has to be installed close to cold process equipment, it is advisable to install non-combustible thermal insulating material and/or neutral elements between them.

3.4 Electrical/gas connections

Before being offered for sale on the market, the appliance was subjected to gas and electrical testing (as required). The appliance is supplied without a power cable. The installation technician must connect the equipment in compliance with current safety regulations on the basis of the power of the appliance.

Note

*The identification plate, see point "**A**" on the installation diagram, is located in the compartment inside the door for appliances with a compartment, or on the left-hand side for oven-type or countertop appliances. A second plate, showing the model and serial number, is located inside the control panel; a third is included in the certificate of conformity; and a fourth is included in the instruction manual.The serial number can also be tracked from the sales document (after 2008). The plate has all the data needed for correct electrical installation. The installation and possible conversion to another power supply voltage (if envisaged) must be implemented exclusively by professionally qualified and authorized personnel. Before using the appliance, carefully clean all surfaces intended to come into contact with food.*

Warning

Installation operations, any conversion to other types of gas and start-up must only be performed by qualified personnel, in accordance with current regulations

Gas systems, electrical connections and premises where the appliances are installed must comply with current regulations in the country of installation; in particular, the appliance must be installed in a room with good ventilation, if possible under a suction hood to ensure complete evacuation of the exhaust gases formed during combustion. The air required for combustion is 2 m3/h per kW of installed power. The appliance can be installed alone or in series with other appliances in our production range. A minimum distance of 10 cm between appliances must be respected to prevent contact with any walls made of flammable material; furthermore, appropriate measures should also be adopted to ensure the thermal insulation of flammable parts, such as the installation of heat shields; take special care to ensure that appliances are installed in an appropriate and safe manner. The support feet can be adjustable in height and any unevenness can therefore be eliminated.

ELECTRICAL CONNECTION

Caution

For direct connection to the grid, a device must be provided to ensure disconnection from the grid, with a contact opening distance that allows complete disconnection under overvoltage category III conditions, in accordance with the installation rules

The connection terminal block is located on the front (see installation diagram). To install the power cable, proceed as follows:

- Remove the front panel
- Pass the new connection cable through the cable gland, connect the leads to the corresponding terminal on the terminal block and fasten them securely.
- Lock the cable with the cable gland and refit the panel. The earth/ground lead must be longer than the others so that if the cable gland breaks it is disconnected after the power cables.

Note

Make sure that the mains voltage complies with the data on the appliance's ID plate and that there is good conductivity to earth/ground. Pay attention when inserting leads to ensure they do not obstruct the normal course of work and routine appliance cleaning operations. Also make sure that the power cable is never pulled taut and is not placed in contact with sources of heat.

Note

The connection cable must have the following characteristics: it must be silicone type (to withstand temperatures of 180 °C), and must have an appropriate cross-section for the power of the appliance (see technical data table).

EQUIPOTENTIAL

The appliance must be connected to an equipotential system. The connecting screw is located on the rear of the appliance and is marked by the yellow symbol above it.

Warning

The manufacturer is not liable for and does not indemnify damages caused by incorrect inadequate installations that do not comply with these instructions.

Caution

ALL PARTS THAT GIVE ACCESS TO LIVE PARTS AFTER REMOVAL ARE MARKED WITH THE "WARNING: DANGEROUS VOLTAGE" SYMBOL

GAS CONNECTION

The gas connection (see installation drawing) must be implemented using steel or copper pipes or steel hoses (up to 2 metres in length), in compliance with applicable national standards. All appliances must be equipped with a gas shut-off valve and fast-closing valve. Once installation is complete, make sure that there are no gas leaks from the fittings; to do this, do not use a naked flame but substances that do not cause corrosion, such as solutions of soapy water or leak detectors. All our appliances are subjected to detailed examination: the type of gas, pressure in use and the pertinent category are indicated on the data plate (see attachment).

Note

*The year of manufacture of the appliance can be deduced from the first two digits of the serial number, indicated by the symbol "**Nr**" on the rating plate*

- **THERMAL OUTPUT CONTROL**

The appliances must be checked in order to verify that their thermal output is correct:

- Thermal output is indicated on the appliance's data plate;
- Firstly, make sure that appliance is set for the type of gas used and then make sure that the indication on the data plate matches this gas. To adapt the appliance to another type of gas, make sure that the type of gas in question complies with the information in this instruction manual.

Warning

Pressure is measured with a pressure gauge (minimum resolution of 0.1 mbar) mounted on the appropriate socket (see point "P" in the installation diagram). Remove the M6 locking screw and insert the pressure gauge tube. The test must be performed with all the burners on the appliance switched on and all the appliances in the same line switched on. After taking the measurement, replace the screw, firmly tighten and check the seal.

Liquid gas connection G30 / G31

The liquid gas connection pressure is 30 mbar for butane and 37 mbar for propane. Check the data plate, measure the pressure and verify that the description of the nozzle installed matches the information provided by the manufacturer.

Methane gas connection H G20

The methane gas connection pressure is 20 mbar. Check the data plate, measure the pressure and verify that the description of the nozzle installed matches the information provided by the manufacturer.

- **CHECKING THE PRIMARY AIR FOR MAIN BURNERS AND PILOT NOZZLE**

For burners equipped with air adjustment, set the adjustable bushing and lock it with a screw. The "Burner technical data" table shows approximate values for the "h" parameter (primary air). The primary air flow volume must be adjusted to avoid a flame cut-off when the burner is cold and a flame blowback when the burner is hot. The pilot air adjustment is set testing for the gas which the appliance will use. In the event of conversion to other types of gas, adjust the air using the adjustment bush until the pilot flame is steady and has an intense blue colour.

Disposition for conversion and installation for other types of gas:

Our appliances are tested and set for liquid gas or natural gas (see attached data plate). Conversion or adaptation to another type of gas must be performed by a specialist technician. The nozzles for the various types of gas are contained in a bag included in the supply and are marked in hundredths of mm (see "Burners" technical data table).

- **INSTRUCTIONS FOR EVACUATING EXHAUST GASES**

- "A1" type devices (see data plate)

The appliances must discharge combustion products into appropriate hoods, or similar devices, connected to an efficient fume stack or directly to the outside (fig.1). If this is not possible, using an air suction device connected directly to the outside is permitted (fig.2), having a flow capacity not lower than the value defined in point 6.3.1 of the UNI 8723 standard

- In the case of forced evacuation

The gas supply to the appliance must be directly servo-controlled by the system and must stop if the flow rate drops below the values indicated in point 6.3.3;6.4.2 of the UNI 8723 standard. Resetting the gas supply to the appliance must be possible only by hand.

FIGURE (ASPIRATION) 1

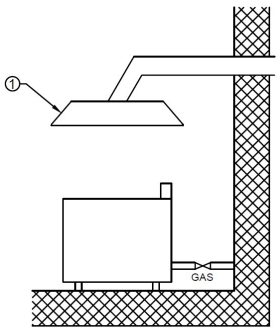

Natural draught 15 kW maximum per room

FIGURE (ASPIRATION) 2

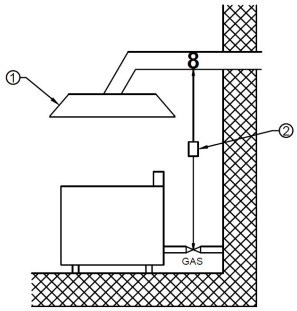

Forced draught 35 kW maximum per room

1 Extractor hood
2 Servo system

4 BURNERS TECHNICAL DATA TABLE (ITGB)

4.1 Burners technical data table

Technical data table - Burner CF S60GE

	12.68 kWh/KG G30 BUTANE 30 mbar	12.87 kWh/KG G31 PROPANE 37 mbar	9.45 kWh/m3st. G20 METHANE H 20 mbar
Burner max 3.5 KW-min 1.2kW			
Burner injector 1/100 mm	93	93	145
Minimum adjustment 1/100 mm	60	60	adjustable
Consumption	kg/h 0.273	kg/h 0.273	m3 st./h 0,37
Primary air h = mm	27	27	14
Burner max 5.5 KW-min 1.8kW			
Burner injector 1/100 mm	117	117	180
Minimum adjustment 1/100 mm	70	70	adjustable
Consumption	kg/h 0.43	kg/h 0.43	m3 st./h 0.582
Primary air h = mm	27	27	14

5 INSTRUCTIONS FOR USE

5.1 General information

This appliance must only be used for its expressly intended purpose for cooking or heating food. Any other use is considered improper. The appliance is also intended for professional use and **must only be used by personnel trained for use and aware of the risks that the hot element entails.**

Warning

The appliance operates at high temperatures, so the following is necessary:

- ***Pay attention to the areas surrounding the hot surface during routine normal operation (danger of scalding);***
- ***RISK OF BURNS Do not touch hot surfaces floor with your hands or other parts of the body to avoid burns caused by high temperatures;***
- ***After switching off the appliance, wait for a sufficient time for it to cool before carrying out any cleaning or maintenance operation.***

5.2 Lighting and adjusting the open rings

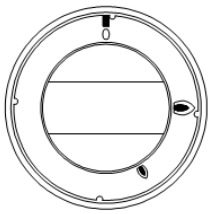

The corresponding burner marked on the index is indicated above each knob on the front panel

5.3 Starting the main burner and adjusting the temperature

- Turn the knob to the left from position "0" as far as the mark and hold it down for a few seconds by pressing the button to ignite the flame. Hold down until the thermocouple keeps the flow of gas open.
- Turn the knob into position to set the burner to minimum

5.4 Turning the appliance off

- Press and turn the gas cock knob to position "0". This control stops the gas supply to the burner.

5.5 Igniting and adjusting the static oven

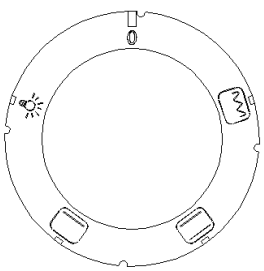

Turn the control knob to the right and set the desired temperature. To switch off the oven, turn the knob to the right into position 0. When the oven is to be used with both heating elements under thermostat control, position the knob at the symbol . When the oven is to be used only with the lower heating element under thermostat control, position the knob at the symbol .

5.6 Switching the grille on

GRILL

The grill must only be operated with the oven in a **semi-open** status.

The supply includes a sheet metal guard that must be fitted underneath the dashboard for protection against overheating. Remove this protective plate only once it has cooled down. During operation, the grill becomes hot: to remove it and avoid burns, we recommend wearing protective gloves.

Turn the oven control knob to the symbol

5.7 Igniting and adjusting the multi-function electric oven

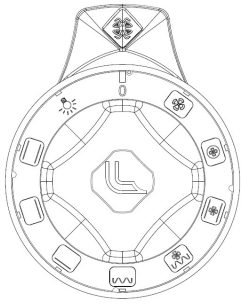

The hot air circulated by the fan is distributed throughout the oven chamber to ensure uniform cooking. Since the chamber is heated uniformly, different foods can be cooked simultaneously on several levels. Turn the knob to the symbol (hot air) and set the desired temperature. The is absolutely no need to preheat the oven, since the chamber heats up quickly once the hot air is activated. To ignite the oven, turn the selector knob to the right or left to set it in one of the following positions:

Upper and lower heating element

Bottom heating element

Top heating element

Grill heating element

Grill heating element and ventilation

Lower, upper heating element and ventilation

Circular heating element and ventilation

Ventilation

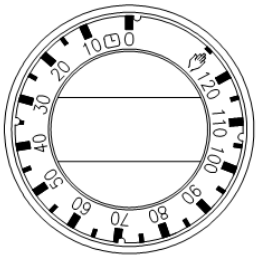

The green pilot light comes ON, indicating that the oven is powered up. After selecting the type of cooking, turn the timer knob to the left into the manual position ("hand" symbol on the disk) or to the right, setting it on the required time between 0 and 120 minutes. In the latter position, after the set time elapses, the buzzer operates and the oven simultaneously switches off.

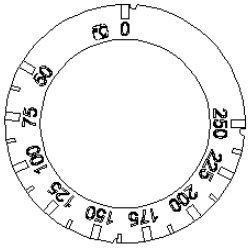

After setting the cooking time, turn the thermostat knob (see figure) to the right, setting it at the desired temperature

Caution

When the oven is operating, the door must not remain open as it could overheat and damage the knobs and the protective plates

GRILL:
While the grill is operating, the oven door must be **closed** and the thermostat knob be positioned in the 200 °C position

5.8 Oven lighting

To switch the oven lamp ON, press the button with the symbol . This means you can check food while it is cooking through the glass without opening the door.

6 MAINTENANCE

6.1 Routine

When using the appliance over time, it is essential to perform regular maintenance to ensure safe operation. We therefore recommend stipulating a service contract.

Caution

Maintenance must only be performed by specialist personnel in compliance with current regulations and our own instructions.

Before carrying out any maintenance and/or cleaning operation:

- Disconnect the appliance from the mains power supply and/or close the gas.
- Wait for a sufficient time for the appliance to cool down.
- Do not wash the appliance with direct or high-pressure jets of water, since any infiltration of water into the electrical components could jeopardise correct operation of the appliance and its safety systems.

Warning

For maintenance/replacement of components, order and use only original spare parts.

Replacing parts must exclusively be performed by authorised and/or qualified personnel. When replacing the electrical components of the machine and the electrical panels, scrupulously follow the technical characteristics for the replacement component indicated on the component itself. The appliance does not require any special maintenance but during the use of the equipment it is advisable to check the following at least once a year (possibly increasing the frequency depending on the degree of use):

- The status of connections especially on the terminal board and the power supply cable, as well as the status of the gas connections;
- The operating condition of the various components (perform a functional test);
- For appliances fitted with rotary resistances, remove the hub, grease it and replace the three o-ring seals to avoid possible leaks.

6.2 Changing the open ring nozzles (fig. C)

- Remove the grills, burners and pans. Use 12 wrench to replace the nozzles with the appropriate ones and adjust the primary air (h) (see the "burners" technical data table) by unscrewing the locking screw
- After setting the adjustment, lock the screw, set the minimum by turning the screw to the right or left until heat reaches 1.2 kW for the 3.5 kW burner and 1.8 for the 5.5 kW burner.

6.3 Replacing the oven lamp

- Cut of the power supply
- Remove the glass cap on the lamp holder
- Unscrew the lamp bulb

The new lamp bulb must have the following characteristics:

- Resistance to heat up to 300 °C
- Power 15W
- Voltage 230V 50Hz

6.4 Minimum setting

- After conversion to use another type of gas, or if a flame is too high when the knob is in position (small flame), adjust the minimum setting by turning the by-pass screw. For operation with LPG, the by-pass must be completely closed; for operation with natural gas, it must first be closed and then opened by 1/4 turn

6.5 Spare parts

It is possible to replace parts such as the gas tap, thermocouple, spark plug or the gas pipes simply and quickly. To replace such parts, proceed as follows:

- **GAS TAP:** after disassembling the front panel, unscrew the gas connection screw couplings, remove the coupling, replace the faulty parts and install the new ones in sequence

- **THERMOCOUPLE:** unscrew the pilot burner coupling, unscrew the gas tap coupling in the same way and replace the element

- **HEATING ELEMENTS**; open the oven door and remove the wires connecting the heating element. Unscrew the supports that fasten the oven to the enclosure and then replace it

Caution

WHAT TO DO IN THE EVENT OF FAULTS:

Close the gas connection cock and/or switch off the power using the up-line device. Notify customer service.

Warning

MEASURES TO BE TAKEN IF THE APPLIANCE IS NOT TO BE USED FOR A LONG TIME:

Close the gas cock and/or disconnect the power supply. Clean the system as specified above.

7 CLEANING

7.1 Routine cleaning

Caution

The use of flammable fluids to clean the appliance is forbidden

To ensure hygiene and the durability of the appliance, perform external cleaning on a regular basis, taking care not to damage the cables and the electrical connections. Before starting cleaning, disconnect the appliance from the power supply. Parts in steel can be washed with warm water and a neutral detergent: Rinse them thoroughly to eliminate all traces of detergent and then dry with a dry cloth. Do not use abrasive and corrosive detergents. Enamelled parts must be washed with soapy water. For appliances that included an oven, cleaning it is made easier by removing the support grid. Thorough, daily cleaning prevents faults and accumulated deposits of fat and/or food. The steels used in the manufacture of professional equipment are tried and tested materials of the highest quality. Thanks to their characteristics, they are ideal materials for use with food substances.

Consequently, when using stainless steel appliances, the following suggestions must be observed:

- Stainless steel surfaces must always be kept clean, also ensuring contact with the air. The lack of oxygen under layers of scale, starch, egg white or other deposits means that surfaces can be affected by corrosion
- Do not use products containing salt or sulphuric acid to remove scale. Suitable products are available commercially but a diluted solution of acetic acid can also be used
- To clean STAINLESS STEEL appliances, it is advisable to use detergents specifically formulated for this material. For "minor cleaning", a mild washing up liquid solution may also be used
- **Do not wash the appliance with jets of water under pressure**
- Avoid using detergents containing abrasive powders or bleaches of any kind
- Lockable stainless steel appliances, during periods of inactivity, must be left uncovered so that air can freely access internal metal surfaces
- Stainless steel must not remain in contact for long periods with concentrated acids or with aromatised concentrates such as salt solutions, mustard, spice mixtures or the like. At certain temperatures and concentrations, these substances can damage the passive layer. Contact surfaces must therefore be immediately rinsed with clean water and then dried
- It is inadvisable to use stainless steel pots exclusively to cook foods in salt water (pasta, rice, potatoes, etc.). From time to time, these pots must also be used to cook foods containing fats or vegetables. This helps to prevent damage caused by corrosion
- After cooking foods in salt water, rinse the tanks with fresh water since salt water residues from cooking form layers of highly concentrated saline solution that can cause spotting corrosion
- To prevent so-called secondary corrosion, prolonged contact of stainless steel with ferritic steels should be avoided
- Any secondary corrosion spots must be eliminated immediately
- Do not use sharp objects that may scratch stainless steel parts and consequently give rise to deterioration